




PLUSSOUND





IN-EAR MONITORS
QUICK START GUIDE

HOW TO USE

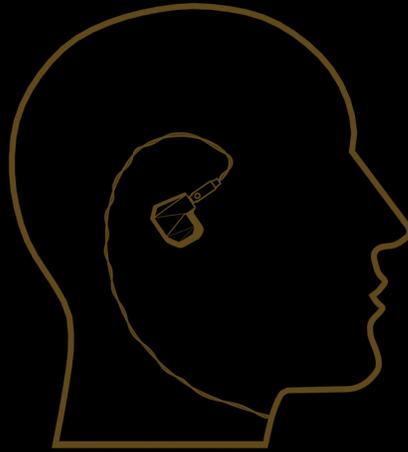

Fit Guide

Insert the earphone into your ear with the cable facing forward and the engraved logo facing outwards. Wrap cable behind your ear once earphone is positioned. To remove, grab the earphones by the sides to pull it out. Never pull on the cable when removing as they may cause damage to cable and earphones.

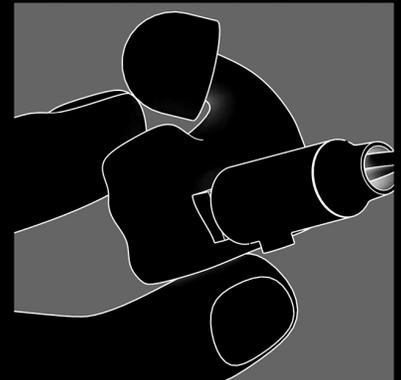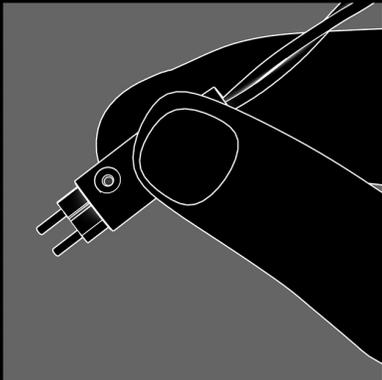

Cable Orientation

Cable comes installed to your earphones in the correct orientation. To remove, grab connector by the sides and gently pull and move side to side until removed. To insert back, gently push connector into socket until it is secure. Make sure locking screw face outwards.

For best results, avoid repeated removal and insertion of cable unless absolutely necessary.

Earphone and cable work best and last longer when it is not heavily abused, bent, pulled, twisted, or dropped.

SAFETY PRECAUTIONS

Make sure you start with your volume at its lowest on your source.

Listening at high volume may result in hearing damage. Please use with caution.

Do not place very heavy objects over earphones and cable.

Avoid places with moisture, dust, or smoke.

Avoid exposing the earphones and cable to direct sunlight or extreme temperatures.

Keep clean and store in cool area after each use.

Never use chemical or cleaning products on earphones and cable or it may alter surface.

Avoid dropping or exposing earphones to strong vibrations.

If the earphones or cable gets wet (rain, water, chemical, etc.) allow it to dry.
If it does not work, contact PLUSSOUND for further instructions.

If you experience ringing in your ears, lower the volume or stop listening until it goes away.

Use in safe environments to avoid accidents.

Be aware of your surroundings especially outdoors while using your setup.

Do not modify or tamper earphones and cable. This will void warranty and may result in unnecessary damaging of components.

Keep this product out of reach of small children.

WARRANTY

Earphones and included cable come with a two-year warranty on parts and labor due to manufacturing faults from the date of original shipment. This warranty is available if purchased directly or from an authorized dealer or distributor. If the product is found to be defective, PLUSSOUND will repair or replace product at own discretion. PLUSSOUND, importer, and distributor shall not be liable for damages as a result of improper use or operation of this product. Minor imperfections, wear, tear, negligence, water damage, ear wax, shock, loss, theft, misuse, acts of god, abuse, or modifications performed by anyone other than PLUSSOUND are not part of the warranty. The user is responsible for following proper instructions and precautions provided in this guide. All information was written based on current product specifications. If you experience issues, you must visit the website at www.plussoundaudio.com and click on Info > Contact to fill out form or by email at sales@plussoundaudio.com.