



PLUSSOUND




SIGNATURE EARTIPS
QUICK START GUIDE

SILICONE

In-house designed medical-grade silicone eartips that are soft and comfortable to use.

Special 1.6mm nozzle wall thickness reduces covering over sound bores when inserted into ears to maintain sound linearity and improve sound quality.

Compatible with various IEMs with nozzles ranging from 4.3mm and up to 7mm.

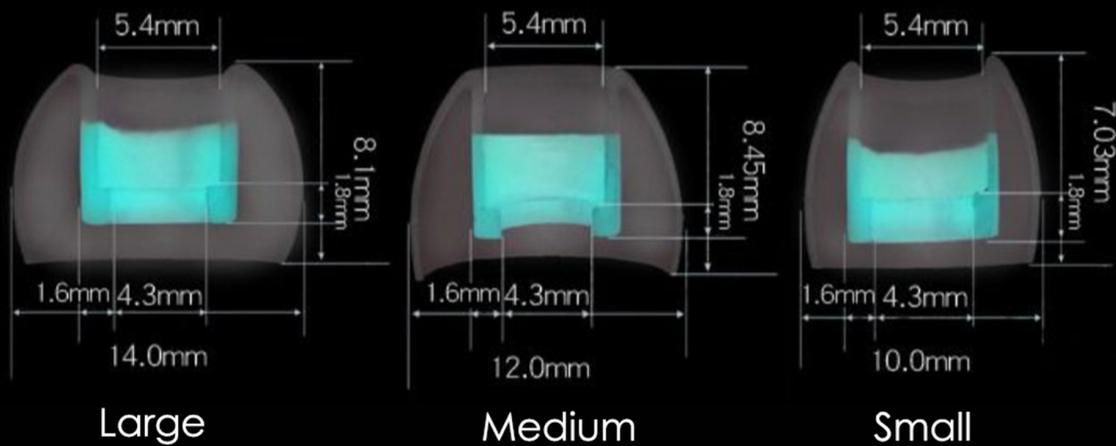

INSTALLATION

Turn the eartips inside out so that the nozzle is exposed

Pinch exposed nozzle and gently insert into earphone nozzle

Once eartips are fully inserted onto earphones, flip back tips to its original state


Enjoy!

HYBRID

Special in-house designed medical-grade liquid silicone eartips with partial foam over nozzle tubing providing exceptional comfort and sound isolation.

Special 1.6mm nozzle wall thickness reduces covering over sound bores, suppressing irregular waves and reflections when inserted into ears to maintain sound linearity and improve sound quality.

Compatible with various IEMs with nozzles ranging from 4.3mm and up to 7mm.

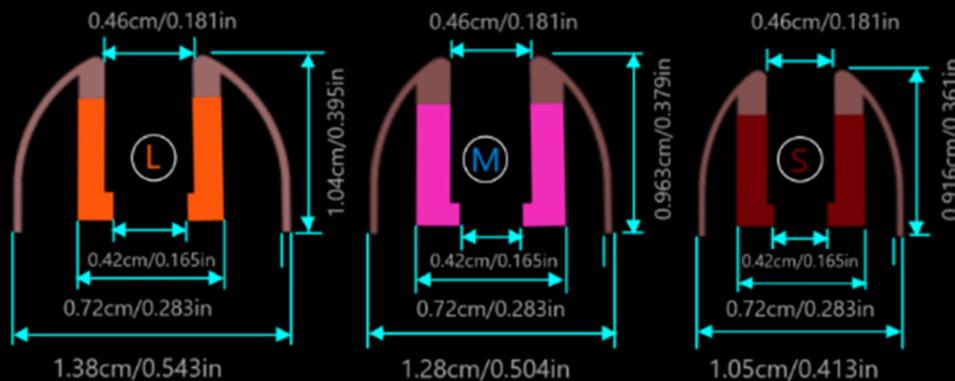

INSTALLATION

Pinch eartip nozzle and gently insert into earphone nozzle

Compress eartips prior to inserting into ear canal

Once inserted, allow a few seconds for the eartips to expand to achieve ideal isolation.

Enjoy!